




Getting to know your Polycom Studio

The Polycom Studio USB video bar is a high-quality camera and speakerphone system that integrates with Horizon Collaborate and includes key features such as an auto-framing camera, stereo microphones and stereo speakers.



1. USB type C connector (USB 3.0 with USB 2.0 compatibility).
2. 3.5mm stereo input.
3. RJ11 input for external microphone (optional).
4. Kensington security lock.
5. Remote control pairing button.
6. Power connector.


Navigating your Polycom Studio

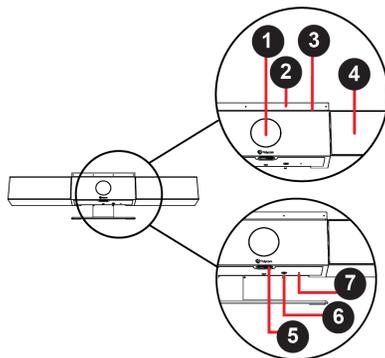

Ref	Feature	Feature Description
1	Camera	Camera with a privacy shutter that enables or disables the video input as you choose.
2	Microphone array	Stereo microphone that captures audio.
3	LED light indicators	Indicate the status and the tracked speaker.
4	Speakers	Stereo audio output.
5	Privacy shutter lever	Covers or uncovers the camera lens.
6	Remote control pairing	Enables the Bluetooth remote control pairing mode.
7	Reset	Resets the Polycom Studio USB video bar to the factory software version or clears all saved configurations.

Connecting to Horizon Collaborate

Only two connections are required, one to the Studio and the second to the room screen (optional).

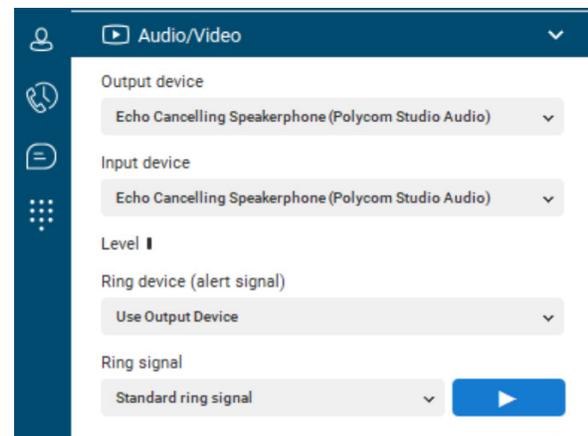


1. Connect the USB cable from the Studio to your PC.
2. Connect the cable from the screen to your PC.
3. Ensure the Studio is your preferred device in Horizon Collaborate by selecting the settings and then Audio/Video.

Your Polycom Studio should now be connected to Horizon Collaborate. You can make video calls to individual contacts or even to a group of colleagues through the 'My Room' option.

Using your Remote Control

The remote control automatically pairs with the USB video bar when you turn it on for the first time. If inactive for 30 seconds, the control will go to sleep but you can wake it up by moving it or pressing any button.

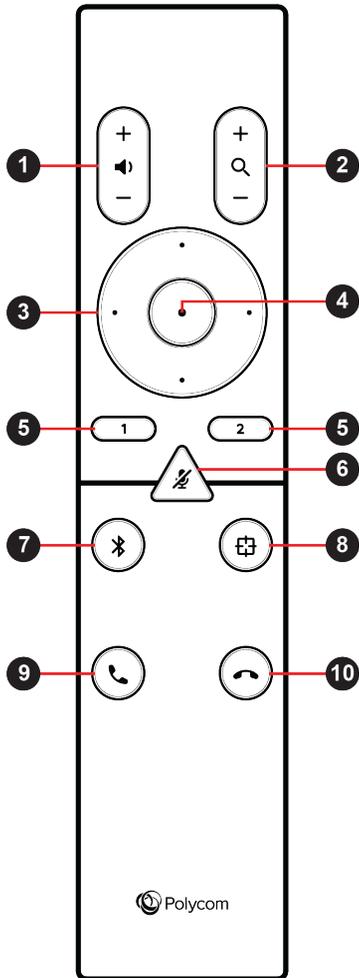

Button Icon	Button Name	Description
1	Volume Up/Down	Adjust speaker volume.
2	Zoom In/Out	Adjust camera zoom in/out when the group framing and speaker-tracking mode is off.
3	Camera Directions	Adjust the direction of the camera when the group framing /speaker-tracking mode is off.
4	Home	Resets the camera to its original status when the group framing and speaker-tracking mode is off.
5	Preset 1/2	Long press to store a camera setting or short press to load a camera setting. The preset buttons only work when the group framing and speaker-tracking mode is off.
6	Mute/Unmute	Mutes or unmutes the microphone. Long press the button to set the remote control ready for pairing.
7	Bluetooth	Long press to enable other Bluetooth devices to find the Polycom Studio USB video bar.
8	Group Framing and Speaker Tracking	Enables or disables the group framing and speaker-tracking mode.
9	Answer	Answers an incoming call or holds/resumes a Microsoft Skype for Business call.
10	Hang Up	Hangs up a call.

Privacy Shutter

Sliding the privacy shutter to the right turns the camera off. Ensure the slider is fully to the left to enable the camera.

